


1 Plug the wireless module into the Red 2 board as shown in the image.

Ensure that the wireless module's 20 pins align with the corresponding holes on the Red 2 board. Gently & carefully press the module into the board.

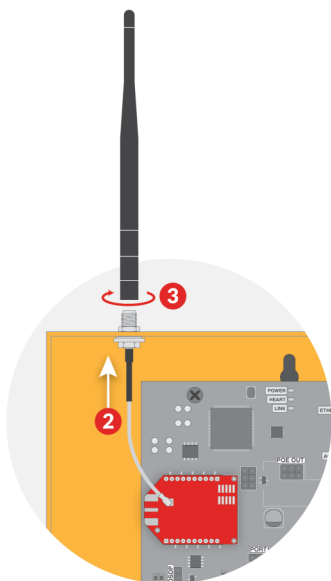

2 Push the threaded end of the antenna wire (connected to the module) through the hole at the top of the Red 2 metal can.

3 Connect the antenna to the antenna wire to the top of the enclosure.

The antenna should point straight up.

Got a question or need help?

801.317.8802 option #2
support@prodatakey.com